Wattstopper® PLUS

Wireless Wallstations

Installation Instructions • Instructions d'Installation • Instrucciones de Instalación

No: 080460 – 11/25 rev. 4

Catalog Numbers • Les Numéros de Catalogue • Los Números de Catálogo: EN-WS-SC3-ZB, EN-WS-SC5-ZB, EN-WS-SHSC3-ZB, EN-WS-TWSC3-ZB, EN-WS-2B-ZB EN-WS-4B-ZB, EN-WS-ZC3-ZB, EN-WS-ZC6-ZB

Countries of Origin: Canada • Pays d'origine: Canada • Países de origen:Canadá

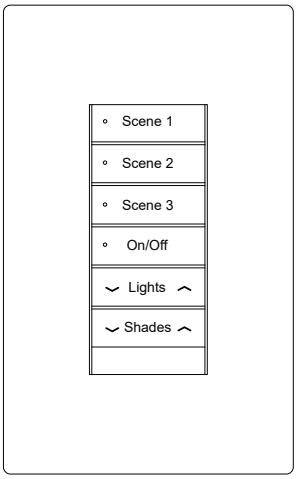

SPECIFICATIONS

Power ..... 2 AA or 4 AAA batteries (depends on mounting)

Wireless (2.4Ghz) Range ..... 30ft line-of-sight to repeater device, ...15ft through standard wall materials

Operating Temperature ..... 14° to 104°F (-10° to 40°C)

Relative Humidity .....5% to 95%, non-condensing

Certifications

UL/CUL listed under UL916.
FCC Part 15/ICES-003
CE
ROHS Compliant
Complies with Electromagnetic Compatibility (EMC) Standards:
EN 61000-4-2 EN 61000-4-4, EN 61000-4-5

Environmental Suitability .....Rated for dry locations

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment

This symbol indicates DC voltage.

DESCRIPTION

Wireless Wallstations are available in a range of colors and configurations for customized light level control. The Wireless Wallstations are battery operated devices enabling quick installation.

The following 5 wired models are available:

- SC Series Wallstations (Scene Dimming)
- SHS Wallstation (Shade Control)
- TW Wallstation (Tunable-White)
- WS Series Wallstations (Standard)
- ZC Series Wallstations (Multi-Zone Controller)

Additionally, the following accessory is available:

- EN-SMK-ZB-WH Surface-Mount Kit

PRODUCT SAFETY

When using electrical equipment, basic safety precautions should always be followed, including the following:

- Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- The use of accessory equipment is not recommended by Legrand as it may cause an unsafe condition.
- Do not use this equipment for other than the intended use.
- Do not install the Wallstation in damp locations. Install in dry, indoor locations **only**.
- Batteries should only be replaced by maintenance staff or other professional.

BATTERY SAFETY

- Never introduce the product and/or its batteries to extreme temperatures or altitudes during use, storage, or transportation.
- Never expose batteries to excessive heat such as sunshine, fire or the like.
- Never damage or use damaged devices / batteries.
- Never short circuit the batteries.
- Always ensure batteries are installed with their correct polarity.
- Ensure batteries are removed from the product after they have become exhausted.
- Batteries should only be replaced by maintenance staff or other professional.
- **CAUTION:** Risk of fire or explosion if the battery is replaced incorrectly.

WIRELESS SYSTEM OVERVIEW

This illustration shows how each component is easily integrated into the Wattstopper PLUS System.

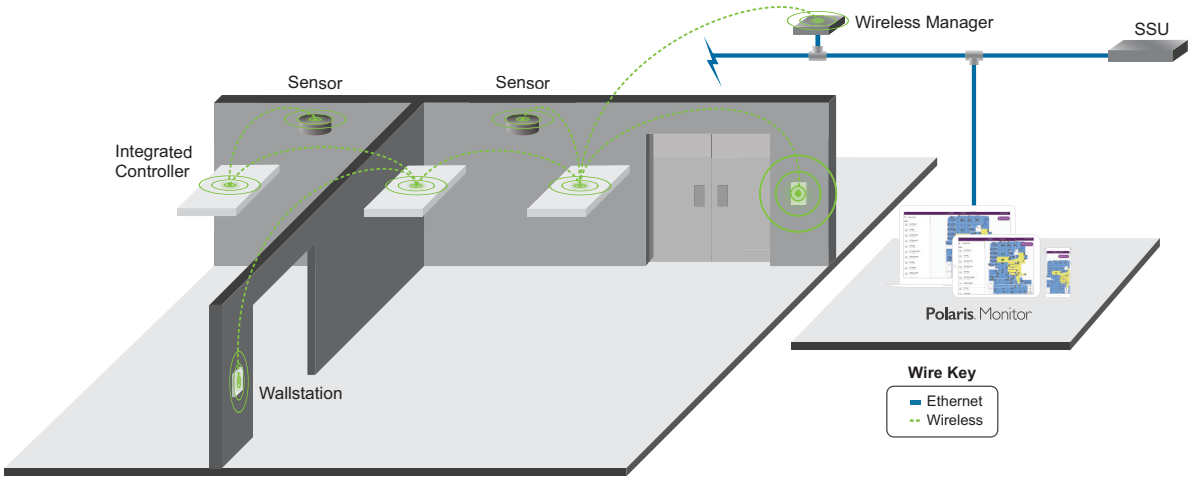

WALLSTATION CONFIGURATIONS

The Wireless Wallstations are available in 8 configurations:

- SC Series Wallstations come in 3 Scene and 5 Scene configurations
- SHS Wallstation comes in a lighting and shade control configuration
- TW Wallstation comes in a tunable-white configuration
- WS Series Wallstations come in 2 Button and 4 Button configurations
- ZC Series Wallstations comes in 3 Zone and 6 Zone configurations.

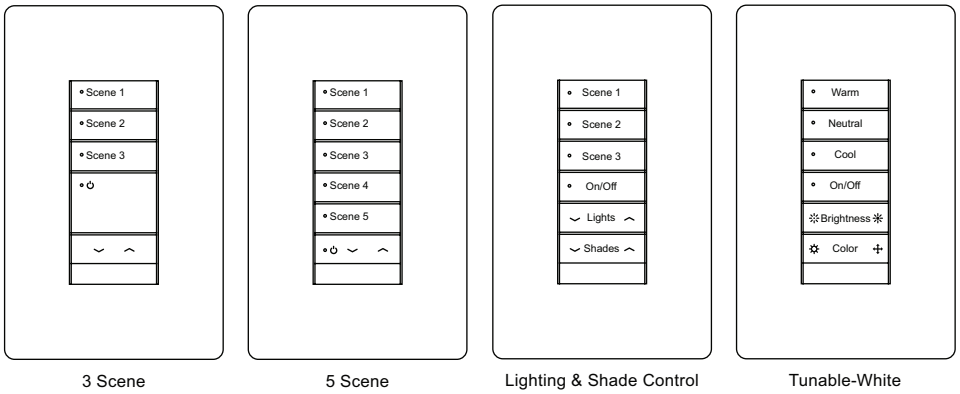

3 Scene | 5 Scene | Lighting & Shade Control | Tunable-White

2 Button | 4 Button | 3 Zone | 6 Zone

INSTALLATION AND MOUNTING

Wall Mount Installation

Step 1

Install the mounting bracket using the supplied screws.

Ensure that the **SINGLE GANG** label is facing up.

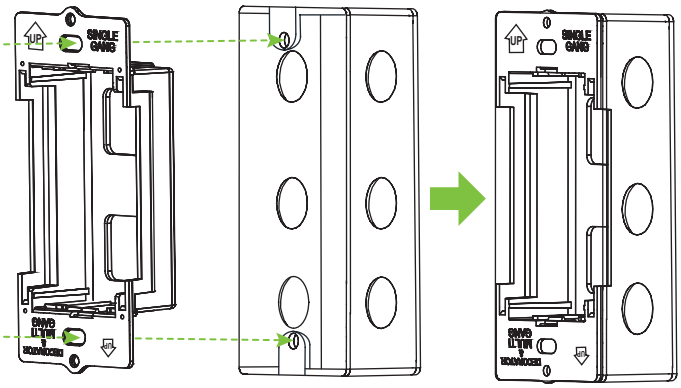

Mounting Bracket Junction Box

Step 2

Install the supplied (2) AA Batteries to the Wireless Wallstation assembly. Pay attention to the battery polarity indicators.

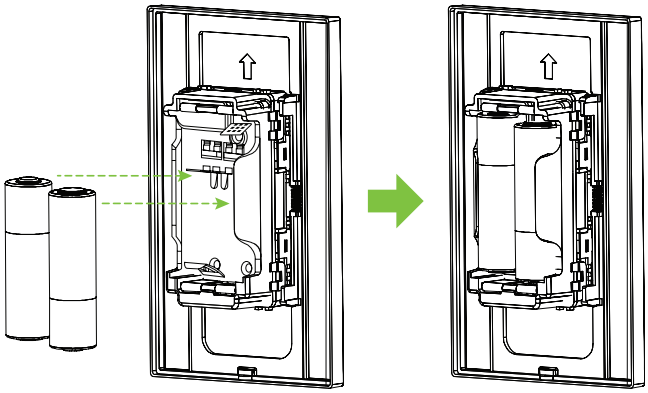

Step 3

Place the Wireless Wallstation assembly into the mounting plate and push gently until ‘clicks’ are heard. This confirms that the pieces are secured.

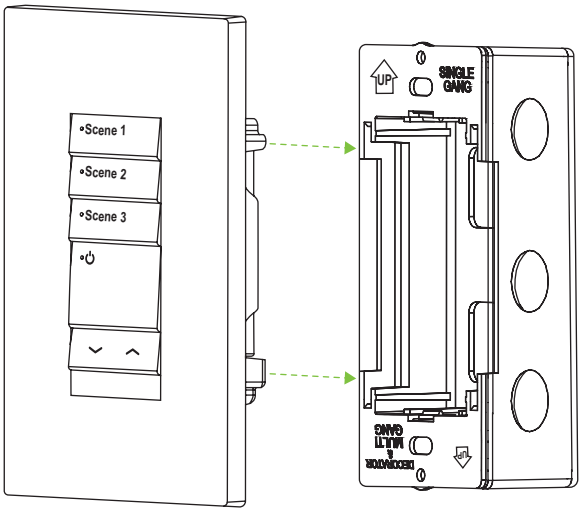

Surface Mount Kit Installation

The surface mount kit is a separate accessory that is provided on request.

Step 1

The Surface-Mount Kit is required for Wireless Wallstation Installations. Screw in the Surface Mount Kit to the wall or use adhesive tape.

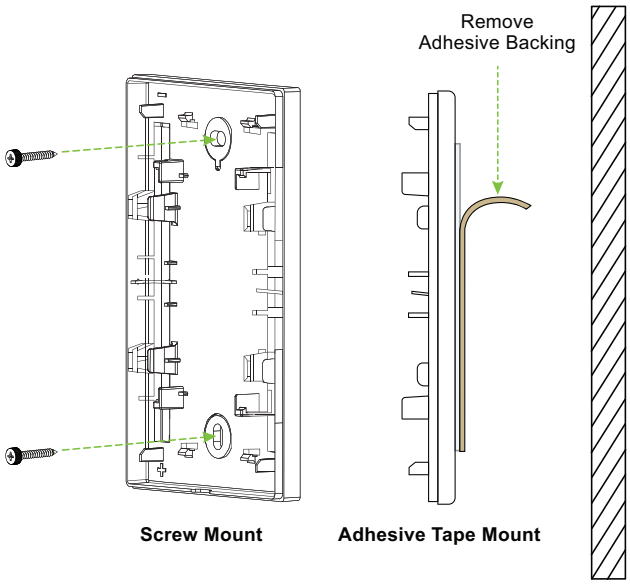

Step 2

Install the supplied (4) AAA Batteries to the Wireless Wallstation assembly. Pay attention to the battery polarity indicators.

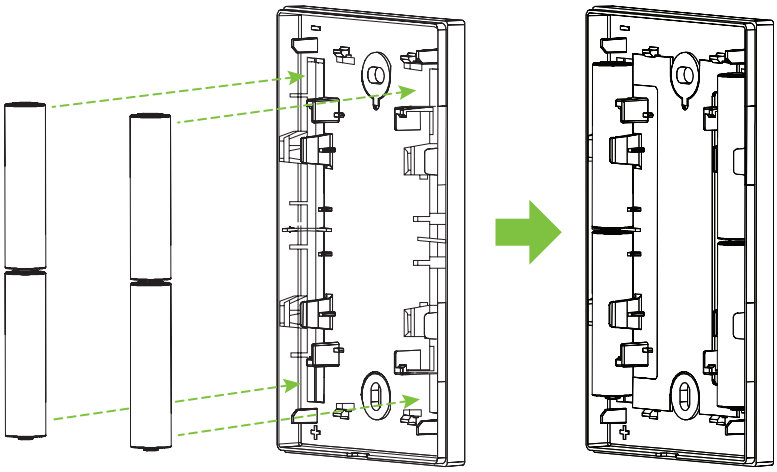

Step 3

Separate the battery housing from the main Wireless Wallstation assembly. Use a small screw driver and gently lift the latches from the Wireless Wallstation assembly.

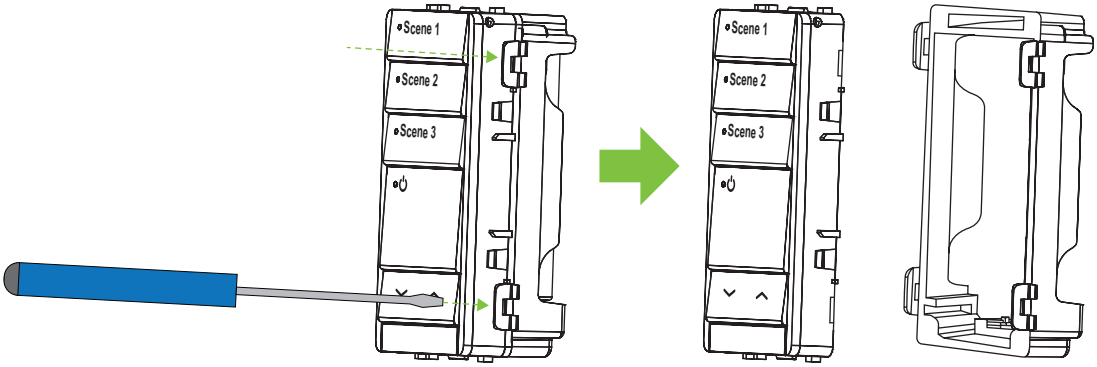

Step 4

Line up and insert the Wallstation assembly into the faceplate attachment. Ensure that the faceplate firmly latches onto all four plastic tabs located on the sides of the Wallstation assembly.

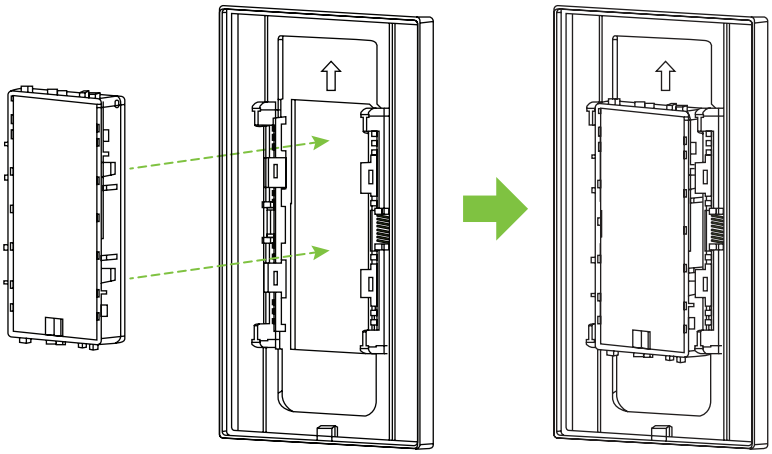

Step 5

Attach the Wireless Wallstation assembly to the surface mount kit until it snaps in.

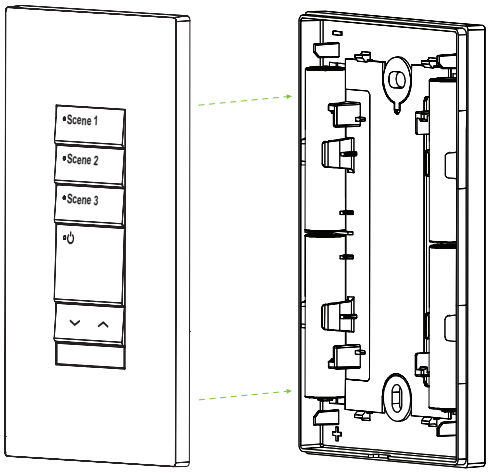

“Decora” Style Wall Plate Installation

Step 1

The Wired Wallstations can also be installed with an off-the-shelf “Decora” style wall plate. Multi-gang wallstation installations require multi-gang decorator wall plates.

Remove the button assembly from the wall plate by pressing the wall plate with your thumbs near the button assembly while grasping the wall plate.

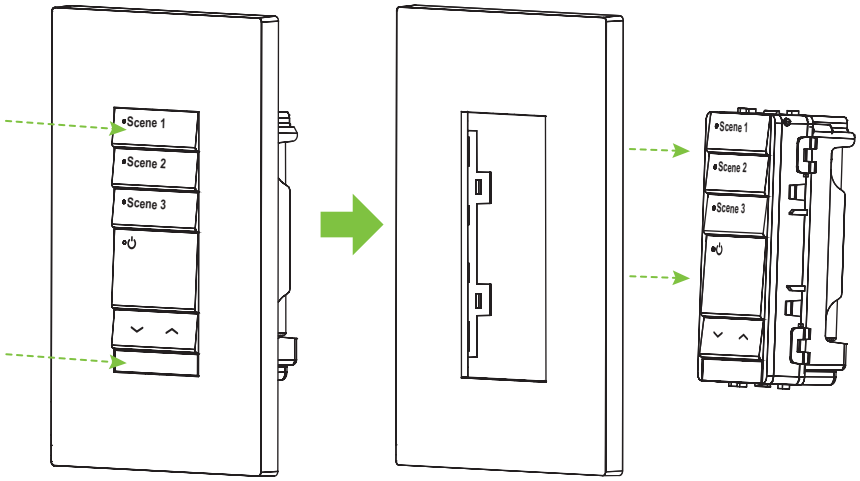

Step 2

Install the supplied wall strips to the button assembly until they snap in.

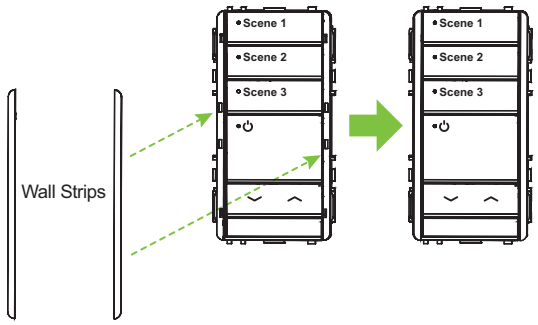

Step 3

Orient the mounting bracket such that the DECORATOR and MULTI GANG labels are facing up. Insert the wallstation button assembly into the mounting plate until ‘clicks’ are heard. Clicks confirm that the pieces are secured.

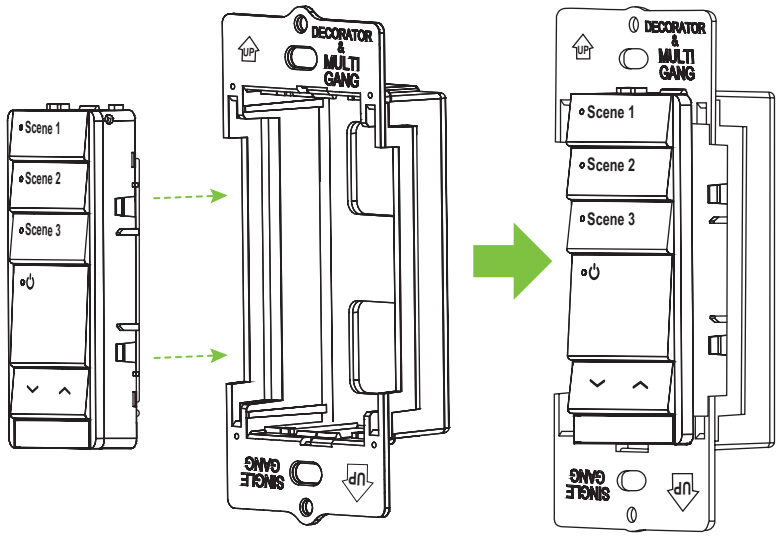

Step 4

Install the mounting bracket using the supplied screws. Install the “Decora” style wall plate using screws supplied with the wall plate.

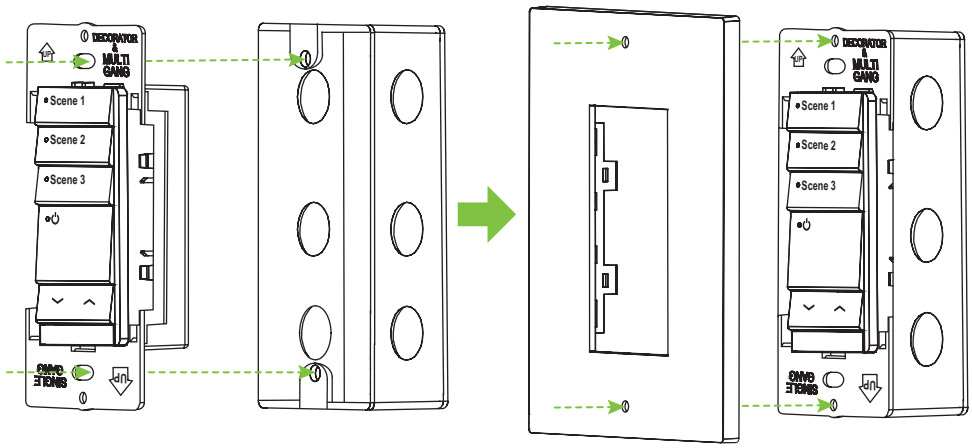

WARRANTY INFORMATION	INFORMATIONS RELATIVES À LA GARANTIE	INFORMACIÓN DE LA GARANTÍA
Wattstopper warranties its products to be free of defects in materials and workmanship for a period of five (5) years. There are no obligations or liabilities on the part of Wattstopper for consequential damages arising out of, or in connection with, the use or performance of this product or other indirect damages with respect to loss of property, revenue or profit, or cost of removal, installation or reinstallation.	Wattstopper garantit que ses produits sont exempts de défauts de matériaux et de fabrication pour une période de cinq (5) ans. Wattstopper ne peut être tenu responsable de tout dommage consécutif causé par ou lié à l’utilisation ou à la performance de ce produit ou tout autre dommage indirect lié à la perte de propriété, de revenus, ou de profits, ou aux coûts d’enlèvement, d’installation ou de réinstallation.	Wattstopper garantiza que sus productos están libres de defectos en materiales y mano de obra por un período de cinco (5) años. No existen obligaciones ni responsabilidades por parte de Wattstopper por daños consecuentes que se deriven o estén relacionados con el uso o el rendimiento de este producto u otros daños indirectos con respecto a la pérdida de propiedad, renta o ganancias, o al costo de extracción, instalación o reinstalación.

No. 080460 – 11/25 rev. 4

© Copyright 2025 Legrand All Rights Reserved.
© Copyright 2025 Tous droits réservés Legrand.
© Copyright 2025 Legrand Todos los derechos reservados.

800.879.8585
www.legrand.us/wattstopper