
125 EUGENE O'NEILL DRIVE NEW LONDON, CT 06320 TEL: 860-445-3800 FAX: 860-405-2990 WWW.ORTRONICS.COM

HDJ PANEL INSTALLATION INSTRUCTIONS


HIGH DENSITYJACK INSTALLATION

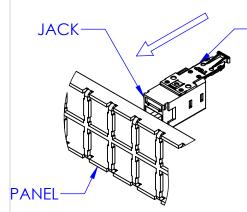


-SLIDE LOCK

PULL BACK SLIDE LOCK TO STOP. THEN INSERT JACK INTO PANEL (JACK WILL GO IN ONE WAY ONLY WITH SLIDE LOCK UP).


TITLE:

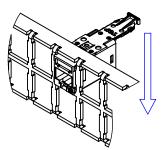

ONCE JACK SHOULDERS COME INTO CONTACT WITH BACKSIDE OF PANEL, PRESS DOWNWARD.

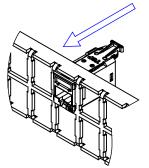


PUSH ON SLIDE LOCK UNTIL THE FRONT IS FLUSH WITH THE JACK FACE.

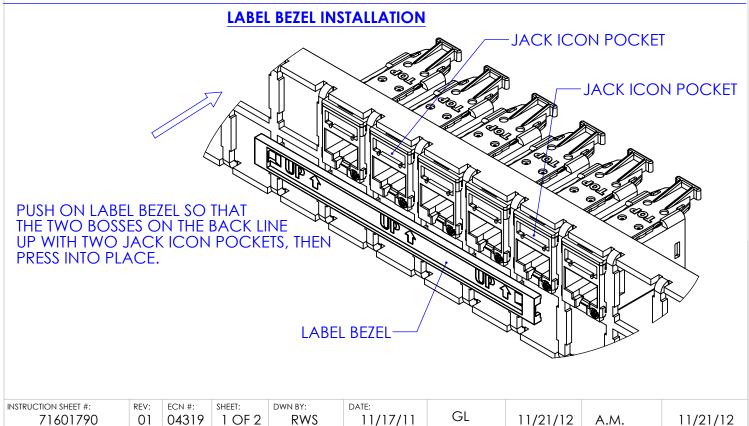


125 EUGENE O'NEILL DRIVE NEW LONDON, CT 06320 TEL: 860-445-3800 FAX: 860-405-2990 WWW.ORTRONICS.COM

HDJ PANEL INSTALLATION INSTRUCTIONS

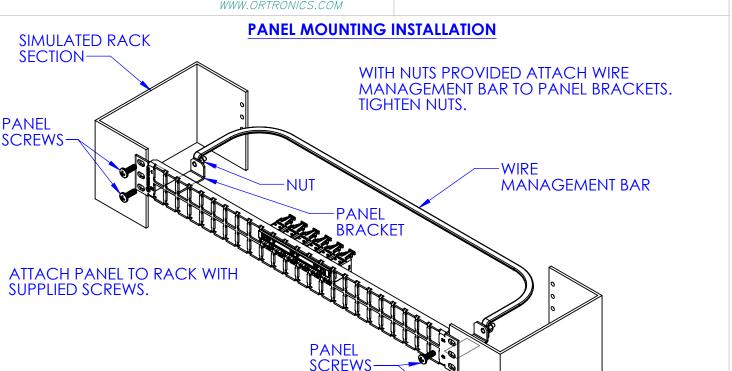

TITLE:

CABLE MANAGEMENT INSTRUCTIONS (TOP VIEW)

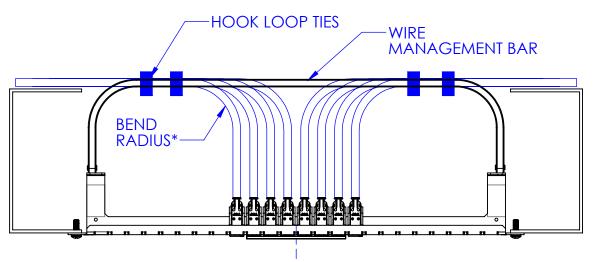

* THE MINIMUM CABLE BEND RADIUS IS 4 TIMES THE OUTSIDE CABLE DIAMETER. HOOK LOOP TIE WRAPS SHOULD BE USED TO ATTACH THE CABLES TO THE WIRE MANAGEMENT BAR. THE CABLE AT THE EDGE OF THE PATCH PANEL SHOULD BE ATTACHED TO THE CABLE WHICH HAS ALREADY BEEN TIE WRAPPED TO THE WIRE MANAGEMENT BAR.