




THESE INSTRUCTIONS ARE FOR BOTH THE 7' AND 8' VERTICAL CABLE MANAGEMENT PANELS. UNPACKAGE PRODUCT AND LOOK FOR ANY DAMAGE. THERE WILL BE A BAG OF (8) #10 SELF THREADING SCREWS FOR ATTACHING.

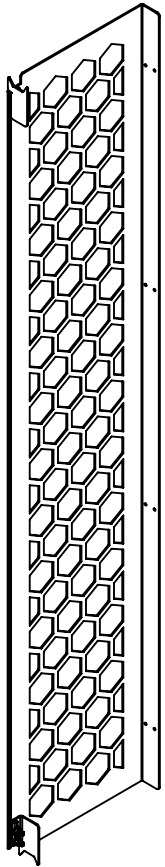


VERTICAL CABLE  
MANAGEMENT PANEL  
ASSEMBLY

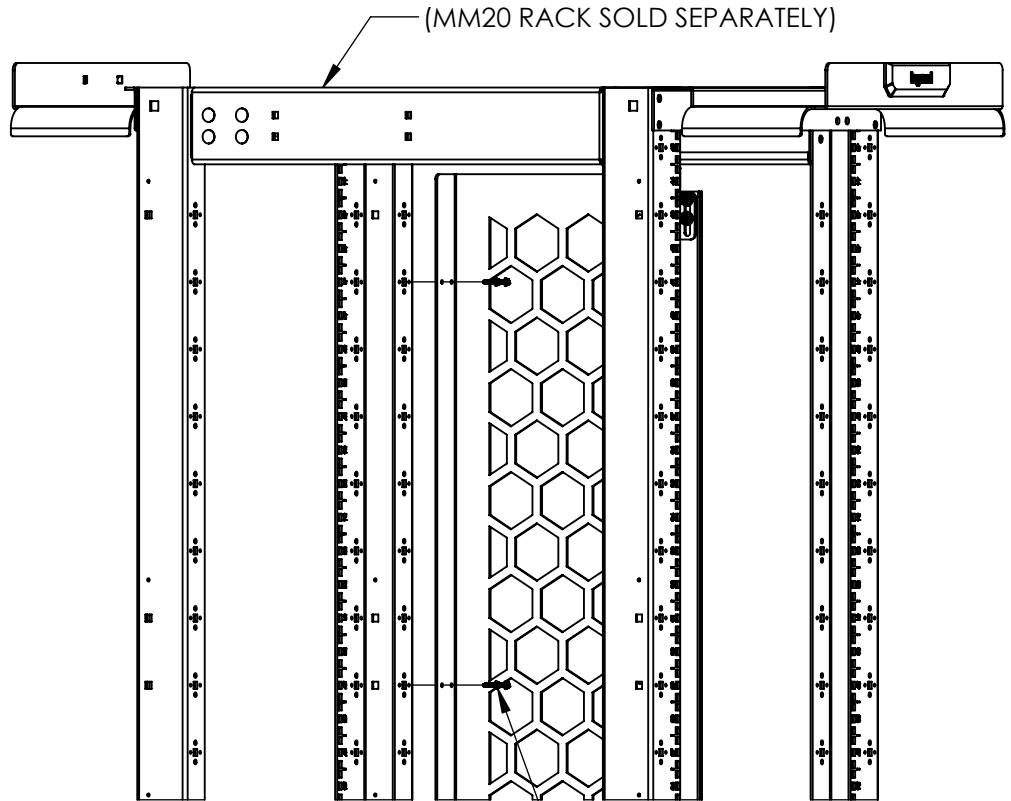

STEP 1: ALIGN PANEL TO THE INSIDE EDGE OF ANY VERTICAL RAIL ON THE RACK AND SECURE WITH THE (8) #10 SCREWS SUPPLIED.

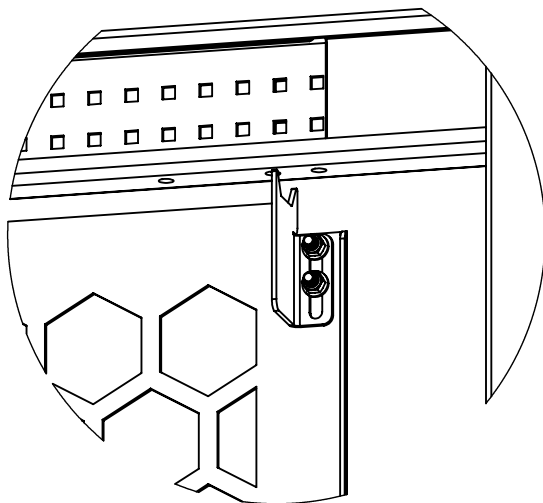

RETRACTED STABILIZING WEDGES  
(ONE LOCATED AT THE TOP AND BOTTOM)

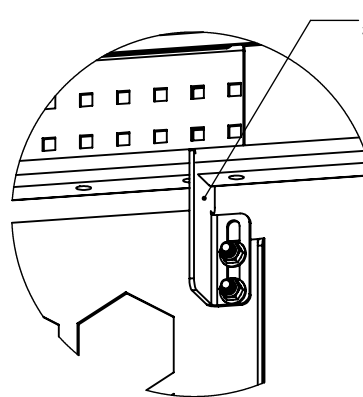

STEP 2: SLIDE UP SNUG WITH BOTTOM OF RAILS. TIGHTEN NUTS WITH 5/16" WRENCH.

EXTENDED STABILIZING WEDGES

OPTIONAL ACCESSORIES TO USE  
(ALL SOLD SEPARATELY)

